Flymo Power Compact

Electrolux

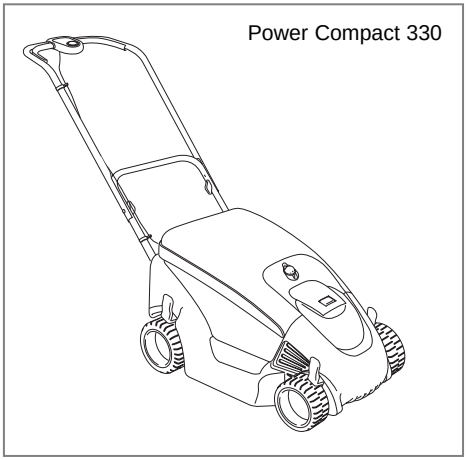

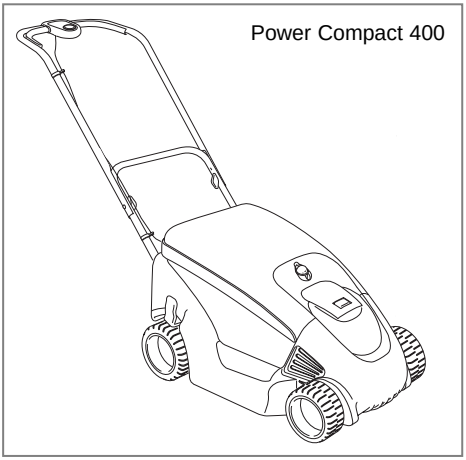

GB	**IMPORTANT INFORMATION** Read before use and retain for future reference
DE	**WICHTIGE INFORMATION** Bitte vor dem Benutzen des Gerätes durchlesen und gut aufbewahren
FR	**RENSEIGNEMENTS IMPORTANTS** A lire avant usage et à conserver pour référence ultérieure
NL	**BELANGRIJKE INFORMATIE** Leest u deze informatie voor het gebruik en bewaar ze voor toekomstige raadpleging
NO	**VIKTIG INFORMASJON** Les bruksanvisningen nøye før bruk og oppbevar den for senere bruk
FI	**TÄRKEÄÄ TIETOA** Lue tämä ennen käyttöä ja säilytä myöhempää tarvetta varten
SE	**VIKTIG INFORMATION** Läs anvisningarna före användningen och spara dem för framtida behov
DK	**VIGTIGE OPLYSNINGER** Du bør læse brugsanvisningen før brug og gemme til senere henvisning
ES	**INFORMACIÓN IMPORTANTE** Léase antes de utilizar y consérvela como referencia en el futuro
PT	**INFORMAÇÕES IMPORTANTES** Leia antes de utilizar e guarde para consulta futura
IT	**INFORMAZIONI IMPORTANTI** Leggere prima dell'uso e conservare per ulteriore consultazione

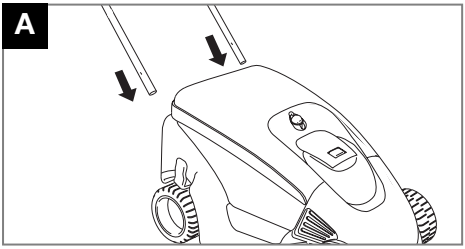
A

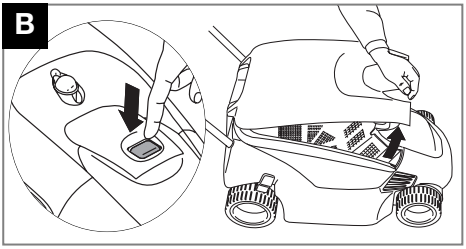
B

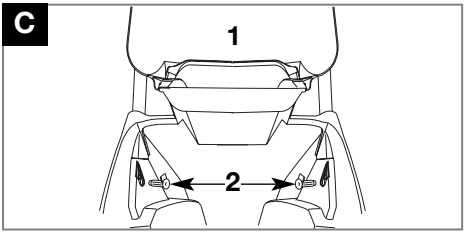
C
1
2

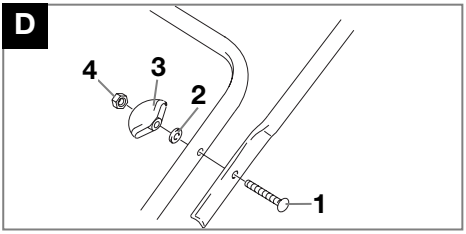
D
4
3
2
1

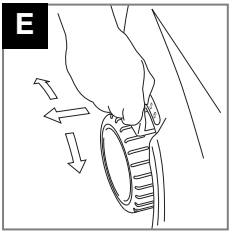
E

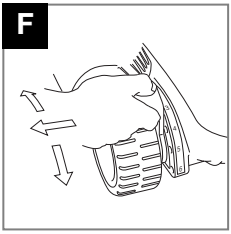
F

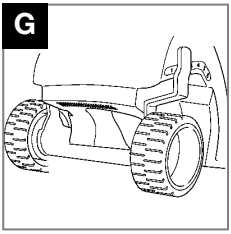
G

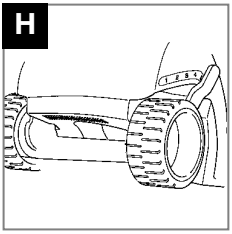
H

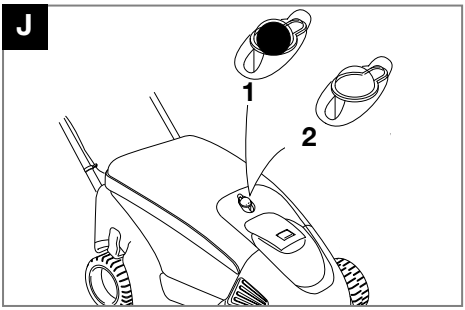
J
1
2

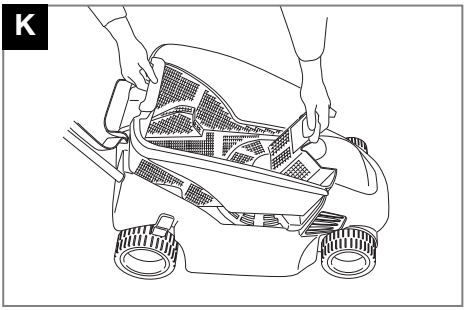
K

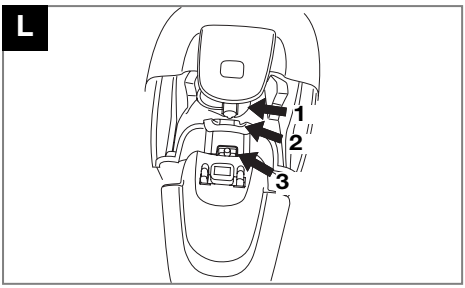
L
1
2
3

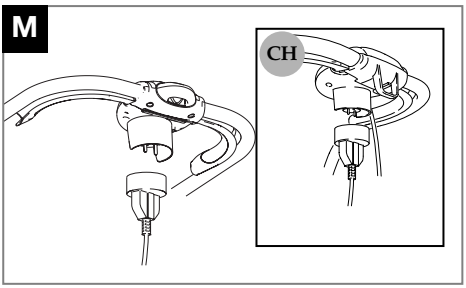
M
CH

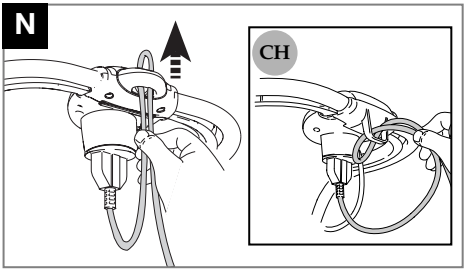
N
CH

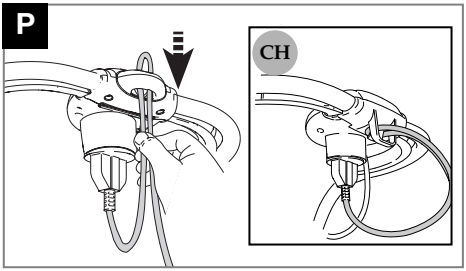
P
CH

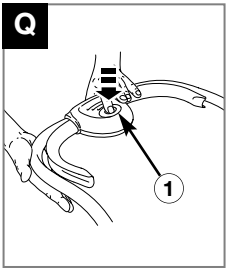
Q
1

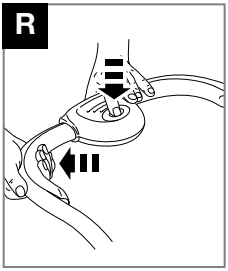
R

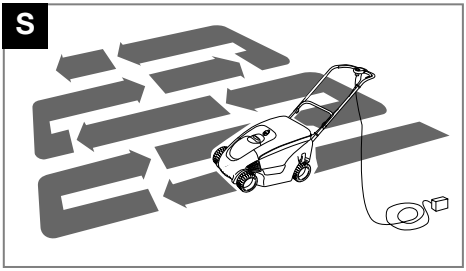
S

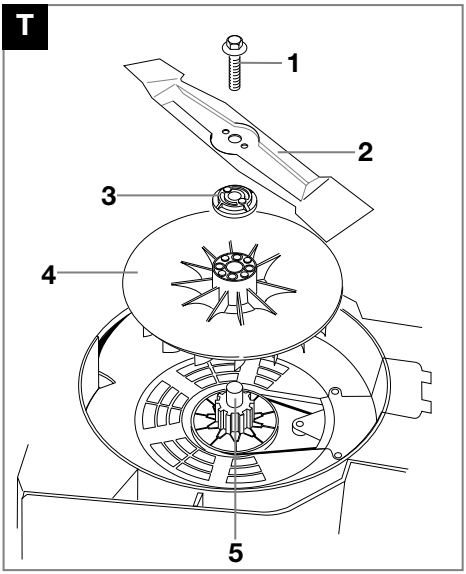
T
1
2
3
4
5

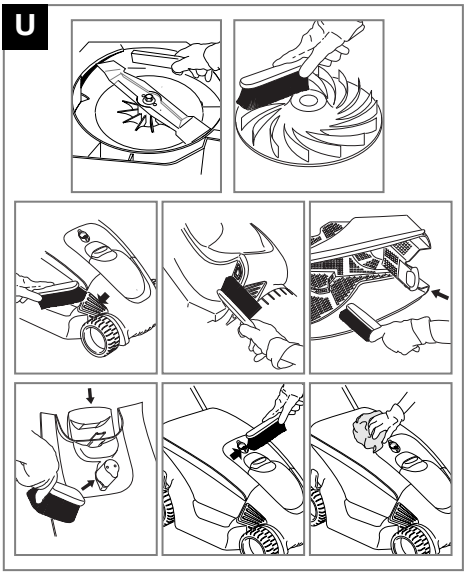
U

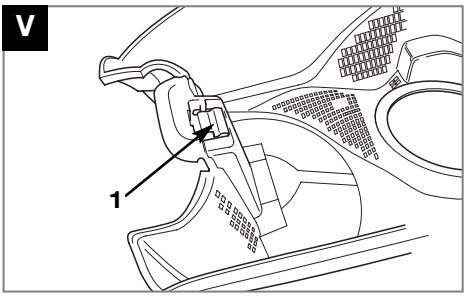
V
1

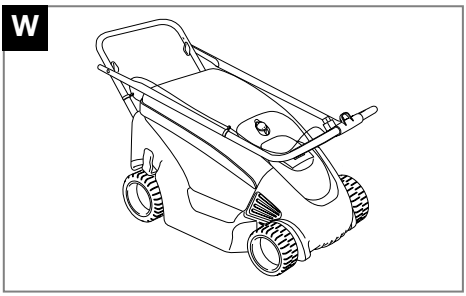
W

GB - CONTENTS

1. Upper handle
2. Cable clip
3. Bolt
4. Washer
5. Handle knob
6. Nut (if applicable)
7. Lower handle
8. Deck
9. Lower handle fixing pin
10. Grassbox Lid
11. Individual height adjustment levers x 4 (Power Compact 330 Only)
12. Height adjustment lever (Power Compact 400 Only)
13. Lock off button
14. Instruction Manual
15. Warning Label
16. Product Rating Label

DE - INHALT

1. Oberer Griff
2. Kabelhalter
3. Bolzen
4. Unterlegscheibe
5. Griffknopf
6. Mutter (falls vorhanden)
7. Unterer Griff
8. Chassis
9. Befestigungsbolzen, unterer Griff
10. Deckel des Grasauffangbehälters
11. Einzelne Höheneinstellungshebel x 4 (Nur Power Compact 330)
12. Höheneinstellungshebel (Nur Power Compact 400)
13. Knopf zur Festsetzung in Aus-Position
14. Bedienungsanweisung
15. Warnetikett
16. Produkttypenschild

FR - CONTENU DU CARTON

1. Guidon supérieur
2. Attache câble
3. Vis
4. Rondelles
5. Vis papillon
6. Ecrou (si applicable)
7. Guidon inférieur
8. Carter
9. Goupille de fixation du guidon inférieur
10. Couvercle du bac à herbe
11. 4 leviers de réglage de hauteur de coupe (Power Compact 330 uniquement)
12. Levier de réglage de hauteur de coupe (Power Compact 400 uniquement)
13. Bouton de blocage
14. Manuel d'Instructions
15. Etiquette d'avertissement
16. Plaquette des Caractéristiques du Produit

NL - INHOUD

1. Bovenstuk van duwboom
2. Snoerklem
3. Bout
4. Pakkingring
5. Knop voor duwboom
6. Moer (indien van toepassing)
7. Onderstuk van duwboom
8. Dek
9. Bevestigingsbout voor onderste duwstang
10. Deksel van vangbak
11. Individuele hoogteafstellingshendels x4 (Alleen voor de Power Compact 330)
12. Hoogteafstellingshendel (Alleen voor de Power Compact 400)
13. Grendelknop
14. Handleiding
15. Waarschuwingsetiket
16. Product-informatielabel

NO - INNHOLD

1. Øvre håndtak
2. Kabelklemme (2 stk)
3. Bolt (2 stk)
4. Skive (2 stk)
5. Vingemutter (2 stk)
6. Mutter (om relevant)
7. Nedre håndtak
8. Klippedeksel
9. Festebolt for nedre håndtak (2 stk)
10. Lokk for gressoppsamler
11. Regulering for klippehøyden (individuell, kun for Power Compact 330)(4 stk)
12. Regulering for klippehøyden (sentral, kun for Power Compact 400)
13. Bryterboks
14. Bruksanvisning
15. Advarselsetikett
16. Produktmerking

FI - SISÄLTÖ

1. Ylempi kahva
2. Johdon pidike
3. Pultti
4. Tiivistysrengas
5. Kahvan nuppi
6. Mutteri (jos käytössä)
7. Alempi kahva
8. Kansi
9. Alemman kahvan kiinnityspuikko
10. Ruoholaatikon kansi
11. Yksittäiset korkeudensäätövivut x 4 (ainoastaan Power Compact 330 -mallissa)
12. Korkeudensäätövipu (ainoastaan Power Compact 400 -mallissa)
13. Poislukituspainike
14. Käyttöopas
15. Varoitusnimike
16. Ruohonleikkurin arvokilpi

SE - INNEHÅLL

1. Övre handtag
2. Kabelklämma
3. Bult
4. Bricka
5. Knopp för handtag
6. Mutter (om sådan är monterad)
7. Undre handtag
8. Kåpa
9. Fästpinne för det undre handtaget
10. Gräslådans lock
11. 4 spakar för individuell höjdinställning (enbart Power Compact 330)
12. Spak för Central höjdinställning (enbart Power Compact 400)
13. Låsknapp
14. Bruksanvisning
15. Varningsetikett
16. Produktmärkning

DK - INDHOLD

1. Øvre håndtag
2. Kabelklemme
3. Bolt
4. Spændeskive
5. Håndtagsknop
6. Møtrik (hvis relevant)
7. Nedre håndtag
8. Skjold
9. Fastgøringsstift til de nederste håndtag
10. Låg til græsopsamler
11. Individuelle højdejusteringshåndtag x 4 (gælder kun Power Compact 330)
12. Højdejusteringshåndtag (gælder kun Power Compact 400)
13. Kontakt
14. Brugsvejledning
15. Advarselsmærkat
16. Produktets mærkeskilt

ES - CONTENIDO

1. Empuñadura superior
2. Grapa de cable
3. Perno
4. Arandela
5. Manija de empuñadura
6. Tuerca (si fuera aplicable)
7. Empuñadura inferior
8. Cubierta
9. Bajar el pasador de fijación de la manilla
10. Tapa de la caja de pasto
11. Palancas de ajuste individual x 4 (Power Compact 330 solamente)
12. Palanca de ajuste de altura (Power Compact 400 solamente)
13. Botón de desenganche
14. Manual de instrucciones
15. Etiqueta de Advertencia
16. Placa de Características del Producto

PT - LEGENDA

1. Guiador superior
2. Grampo do cabo
3. Cavilha
4. Anilha
5. Maçaneta
6. Porca (se aplicável)
7. Guiador inferior
8. Cobertura
9. Pino de fixação da pega inferior
10. Tampa do cesto de relva
11. 4 alavancas individuais de regulação da altura (Apenas Power Compact 330)
12. Alavanca de regulação da altura (Apenas Power Compact 400)
13. Botão para travar
14. Manual de Instrucções
15. Etiqueta de Aviso
16. Rótulo de Avaliação do Produto

IT - INDICE CONTENUTI

1. Impugnatura superiore
2. Morsetto per il cavo
3. Bullone
4. Rondella
5. Manopola dell'impugnatura
6. Dado (se pertinente)
7. Impugnatura inferiore
8. Telaio
9. Perno di fissaggio dell'impugnatura inferiore
10. Coperchio del canestro raccoglierba
11. 4 leve per la regolazione individuale dell'altezza (solo nel Power Compact 330)
12. Leva per la regolazione dell'altezza (solo nel Power Compact 400)
13. Pulsante di sblocco
14. Manuale di istruzioni
15. Etichetta di pericolo
16. Etichetta dati del prodotto

(**GB**) CARTON CONTENTS

(**DE**) KARTONINHALT

(**FR**) CONTENU DU CARTON

(**NL**) INHOUD

(**NO**) KARTONGEN INNHOLDER

(**FI**) PAKETIN SISÄLTÖ

(**SE**) FÖRPACKNINGENS INNEHÅLL

(**DK**) KARTONINDHOLD

(**ES**) CONTENIDO DEL CARTON

(**PT**) LEGENDAS DOS DESENHOS

(**IT**) CONTENUTO DEL CARTONE

Power Compact 330

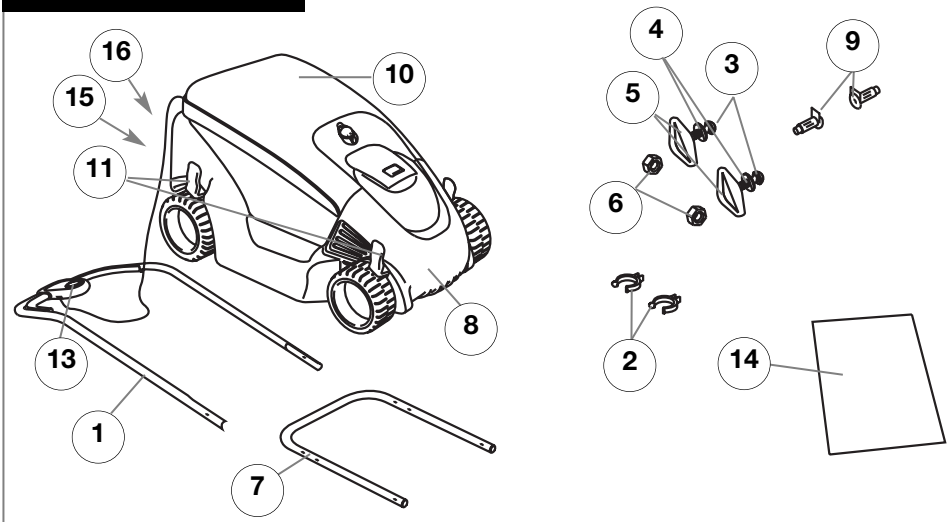

Power Compact 400

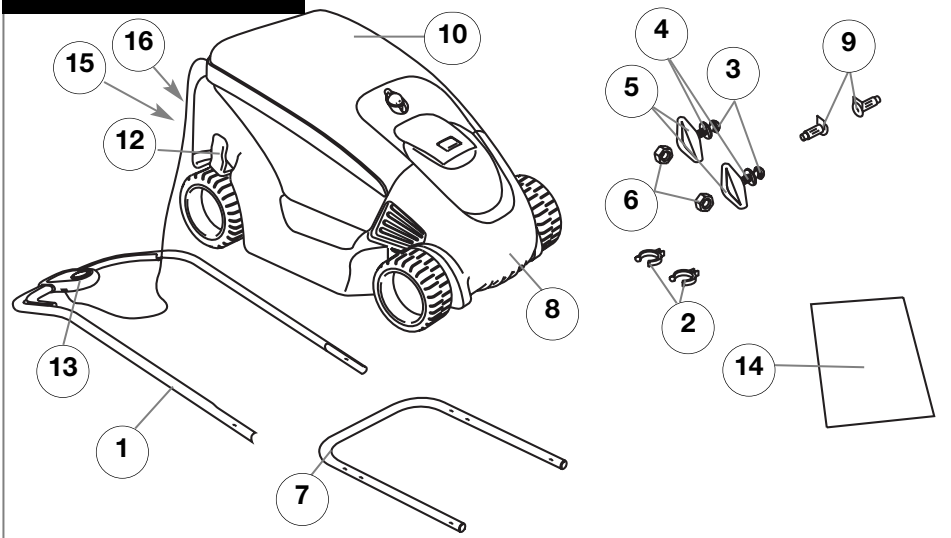

Safety Precautions

If not used properly this lawnmower can be dangerous! This lawnmower can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this lawnmower. The operator is responsible for following the warning and safety instructions in this manual and on the lawnmower. Never use the mower unless the grassbox or guards provided by the manufacturer are in the correct position.

Explanation of Symbols on the Power Compact

Warning



Read the user instructions carefully to make sure you understand all the controls and what they do

Always keep the lawnmower on the ground when mowing. Tilting or lifting the lawnmower may cause stones to be thrown out



Keep bystanders away. Do not mow whilst people especially children or pets are in the mowing area



Switch off! Remove plug from mains before adjusting, cleaning or if cable is entangled or damaged. Keep the cable away from the blade.

Beware of severing toes or hands. Do not put hands or feet near a rotating blade.

Blade continues to rotate after the machine is switched off.
Wait until all machine components have completely stopped before touching them.

Do not mow in the rain or leave the lawnmower outdoors while raining

General

1. Never allow children or people unfamiliar with these instructions to use the mower. Local regulations may restrict the age of the operator.
2. Only use the lawnmower in the manner and for the functions described in these instructions.
3. Never operate the lawnmower when you are tired, ill or under the influence of alcohol, drugs or medicine.
4. The operator or user is responsible for accidents or hazards occurring to other people or their property.

Electrical

1. The use of a Residual Current Device (R.C.D.) with a tripping current of not more than 30mA is recommended. Even with a R.C.D. installed 100% safety cannot be guaranteed and safe working practice must be followed at all times. Check your R.C.D. every time you use it.
2. Before use, examine cable for damage, replace it if there are signs of damage or ageing.
3. Do not use the lawnmower if the electric cables are damaged or worn
4. Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected. Do not repair a cut or damaged cable. Replace it with a new one.
5. Your extension cable must be uncoiled, coiled cables can overheat and reduce the efficiency of your mower.
6. Keep cable away from lawnmower, always work away from the power point mowing up and down, never in circles.
7. Do not pull cable around sharp objects.
8. Always switch off at the mains before disconnecting any plug, cable connector or extension cable.
9. Switch off, remove plug from mains and examine electric supply cable for damage or ageing **before** winding cable for storage. Do not repair a damaged cable, replace it with a new one. Use only Flymo replacement cable.
10. Always wind cable carefully, avoiding kinking.
11. Never carry the product by the cable.
12. Never pull on the cable to disconnect any of the plugs.
13. Use only on AC mains supply voltage shown on the product rating label.
14. Flymo products are double insulated to EN60335. Under no circumstances should an earth be connected to any part of the product.

Cables

Use only 1.00mm^2 size cable up to 30 metres length maximum.

Maximum rating:

1.00mm^2 size cable 10 amps 250 volts AC

1. Mains cables and extensions are available from your local Electrolux Outdoor Products Approved Service Centre.
2. Only use extension cables specifically designed for outdoor use.

Preparation

1. While using your product always wear substantial footwear and long trousers.
2. Make sure the lawn is clear of sticks, stones, bones, wire and debris; they could be thrown by the blade.
3. Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.
4. Replace worn or damaged blades together with their fixings in sets to preserve balance.

Use

1. Use the lawnmower only in daylight or good artificial light.
2. Avoid operating your lawnmower in wet grass, where feasible.
3. Take care in wet grass, you may lose your footing.
4. On slopes, be extra careful of your footing and wear non-slip footwear.
5. Mow across the face of slopes, never up and down.
6. Exercise extreme caution when changing direction on slopes. Walk never run.
7. Mowing on banks and slopes can be dangerous. Do not mow on **banks** or **steep** slopes.
8. Do not walk backwards when mowing, you could trip.
9. Never cut grass by pulling the mower towards you.

Safety Precautions

10. Switch off before pushing the mower over surfaces other than grass.
11. Never operate the lawnmower with damaged guards or without guards in place.
12. Keep hands and feet away from the cutting means at all times and especailly when switching on the motor.
13. Do not tilt lawnmower when the motor is running, except when starting and stopping. In this case, do not tilt more than absolutely necessary and lift only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the appliance to the ground.
14. Never pick up or carry a mower when it is operating or still connected to the mains supply.
15. Remove the plug from the mains:

- before leaving the mower unattended for any period;
- before clearing a blockage;
- before checking, cleaning or working on the appliance;
- if you hit an object. Do not use your lawnmower until you are sure that the entire lawnmower is in a safe operating condition.;
- if the lawnmower starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.

Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the lawnmower is in safe working condition.
2. Check the grassbox frequently for wear or deterioration.
3. Replace worn or damaged parts for safety.
4. Only use the replacement blade, blade bolt, spacer and impeller specified for this product.
5. Be careful during adjustment of the lawnmower to prevent entrapment of the fingers between moving blades and fixed parts of the machine.

Assembly Instructions

C1 - Grassbox lid, C2 - Lower handle fixing pins
Assembly of Lower Handles to Deck

1. Insert lower handle into holes in the deck and push into place. **(A)**
2. Release the grassbox catch and lift the grassbox lid **(B).**
3. Rest the grassbox lid against the lower handle and remove the grassbox.
4. Ensure that the holes in the lower handle are correctly located behind the holes in the deck.
5. Secure the lower handles to the inside of the deck with the lower handle fixing pins. **(C).**
6. Ensure the fixing pins are securely located.
7. Should a problem occur when securing lower handle to deck, carefully lever fixing pins out of location and repeat steps 4 to 6 above.
8. Replace the grassbox and close the grassbox lid.

D1 - Bolt, D2 - Washer, D3 - Handle knob, D4 - Nut (if applicable)
Fitting Upper Handles to Lower Handles (D)

1. Ensure the upper handle is located correctly with the lock-off button on the switchbox uppermost.
2. Ensure the upper handle and the lower handle are aligned correctly.
3. Insert the nut into the handle knob. (if applicable)
4. Fit the bolts, washers and handle knobs.
5. Fit the cable to the handles with the clips provided. Make sure the cable is not trapped between the upper and lower handles.

Adjusting the Cutting Height

F - Front Power Compact 330
G - Highest height of cut
H - Lowest height of cut
Cutting Height Adjustment Power Compact 330
Rear Height Adjustment

1. Select one of the 5 locations and note it as the other lever will need to be adjusted to the same position. **(E)**
2. Lift the lever out of location and rotate to the desired position. **(E)**

Front Height Adjustment

- Using the same height adjustment position repeat the procedure for the other lever **(F)**.

Cutting Height Adjustment Power Compact 400

- Lift the lever out of location and rotate to the desired position. **(E)**

Heights of cut

1 & 2	**low**
3 & 4	**medium**
5 & 6	**high**

Removing, Emptying and Refitting the Grassbox

J1 - Grassbox full,
J2 - Grassbox empty
Grassbox Full Indicator

- **IMPORTANT:**
  The machine must be switched on for the grassbox full indicator to operate

1. When the ball reaches the top of the indicator window, it is time to empty the grassbox. **(J)**
2. When the ball is **NOT** visible in the indicator window, grass is being collected. **(J)**

Emptying the Grassbox

- **Stop the lawnmower, as described in 'To Stop your Lawnmower' and wait until the blade has stopped rotating, BEFORE lifting the grassbox lid.**

1. Release grassbox catch and lift grassbox lid **(B). See Assembly Instructions.**
2. Rest grassbox lid against lower handle and remove grassbox **(K).**
3. Empty grassbox.
4. Replace grassbox and close grassbox lid.

- **If the ball is visible before the grassbox is full, raise the height of cut until the grassbox is full.**

Cut Out Device

L1 - Grassbox lid actuator, L2 - Swich actuator, L3 - Cut out

- **IMPORTANT:** The Power Compact is fitted with a device which will prevent the lawnmower from being started until the grassbox is securely located and the grassbox lid is firmly closed.
- Do not attempt to use your lawnmower without the grassbox in place or with the lid open.

Starting and Stopping

To Start your Lawnmower

1. Connect female extension cable connector to the back of the switchbox. **(M)**
2. Form loop in mains cable and push the loop through the slot. **(N)**
3. To secure, position loop over the hook and pull the cable back through the slot.**(P)**.
4. Connect plug to mains and switch on.
5. Tilt the handle downwards to slightly raise the front of the lawnmower and to reduce the risk of lawn damage whilst starting.

The switchbox is provided with a lock-off button (Q1) to prevent accidental starting.

6. Press and hold the lock-off button **(Q)** on the switchbox, then squeeze one of the Start/Stop levers towards the upper handle **(R)**.
7. Continue to squeeze the start/stop lever towards the upper handle and release the lock-off button.
8. Lower the lawnmower to its proper operating position and commence mowing.

- **NOTE: There are two start/stop levers fitted. Either one can be used for starting the lawnmower.**
- **IMPORTANT**
  Do not use the start/stop levers intermittently

To Stop your Lawnmower

1. Release the pressure on the Start/Stop lever.

How to Mow

1. Start mowing the edge of the lawn nearest to the power point so the cable is laid out on the lawn you have already cut. (**S**)
2. Cut your grass twice a week during the growing season, your lawn will suffer if more than a third of its length is cut at one time.

Do Not Overload Your Mower

Mowing long thick grass may cause the motor speed to drop, you will hear a change in the motor sound. If the motor speed drops you may overload your lawnmower which may cause damage. When mowing in long thick grass a first cut with the cutting height set higher will help reduce the load. See Adjusting the Cutting Height.

Removing and Fitting the Blade and Fan

T1 - Blade bolt
T2 - Blade
T3 - Spacer
T4 - Fan
T5 - Pulley

Always handle the blade with care - sharp edges could cause injury. USE GLOVES.

Removing the Blade and Fan

1. To remove the blade bolt, hold the fan firmly and, with a 13.0mm ring spanner, loosen the blade bolt by turning it anti-clockwise **(T)**.
2. Remove the blade bolt, blade, spacer and fan from the pulley. **(T)**
3. Inspect for damage and clean as necessary.

- **Renew your metal blade after 50 hours mowing or 2 years whichever is the sooner - regardless of condition.**
- **If the blade is cracked or damaged replace it with a new one.**

Fitting the Blade and Fan

1. Ensure the fan is located correctly. **(T)**
2. Fit the spacer to the fan. **(T)**
3. Fit the blade to the spacer. **(T)**
4. Re-assemble blade bolt through blade, spacer and fan.
5. Hold the fan firmly and tighten blade bolt firmly with a 13.0mm ring spanner. Do not over tighten.

Caring for your Lawnmower

Cleaning (U) - USE GLOVES

- **IMPORTANT**
  It is very important that you keep your lawnmower clean. Grass clippings left in any of the air intakes or under the deck could become a potential fire hazard.

1. Remove grass from under the deck with a piece of wood or similar.
2. Remove the blade, **see Figure T**, to gain access to the fan and clean with a soft brush.
3. Remove grass clippings from:
   - all air intakes
   - wheels and height adjustment levers
   - grassbox
   - grassbox lid and both sides of grassbox full indicator
4. Clean around the switch actuator on the grassbox **(V1)**.
5. Wipe over the surface of your lawnmower with a dry cloth.

- **IMPORTANT**
  Never use water for cleaning your lawnmower. Do not clean with chemicals, including petrol, or solvents - some can destroy critical plastic parts.

At the End of the Mowing Season

1. Replace blade, bolts, nuts or screws, if necessary.
2. Clean your lawnmower thoroughly.
3. Ask your local Service Centre to clean the air filter thoroughly and carry out any service or repairs required.
4. Make sure that the electric cable is coiled properly.

Storing the lawnmower (W)

The handles can be folded to take up the minimum of space.

- Loosen the handle knobs
- Fold the upper handle over the lawnmower.
- Ensure the switchbox cable is not trapped.
- Store in a dry place where your lawnmower is protected from damage.

Environmental Information

Electrolux Outdoor Products are manufactured under an Environmental Management System (ISO 14001) using, where practical, components manufactured in the most environmentally responsible manner, according to company procedures, and with the potential for recycling at the end of the products' life.

- Packaging is recyclable and plastic components have been labelled (where practical) for categorised recycling.
- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.

Fault Finding Hints

Fails to Operate

1. Is the correct Starting procedure being followed? See 'To Start your Lawnmower'.
2. Is the grassbox securely located and the grassbox lid firmly closed? See 'Removing, emptying and refitting the Grassbox'.
3. Is the grassbox plunger damaged or missing? See 'Caring for your Lawnmower'.
4. Is the Power Turned On?
5. Check the fuse in the plug, if blown replace.
6. Fuse continues to blow?
   Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.

Poor Grass Collection

1. Disconnect from the mains electricity supply.
2. Check that the grass chute and the underside of the deck are free from grass.
3. Raise to a higher height of cut. See Adjusting the Cutting Height
4. Clean Fan Blades.
5. **If poor collection persists.**
   Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.

Excessive Vibration

1. Disconnect from the mains electricity supply.
2. Check that the blade is fitted correctly?
3. If the blade is damaged or worn, replace it with a new one.
4. If vibration persists, turn the blade through 180° by first loosening the blade bolt, turning the blade and re-tightening the blade bolt.
5. If vibration persists?
   Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.

Lawnmower becomes heavy to push

1. Disconnect from the mains electricity supply.
2. In long grass or uneven ground, the height of cut should be raised to a higher position. See Adjusting the Cutting Height
3. Check that the wheels can rotate freely.
4. If problem persists?
   Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.

Grassbox Full Indicator Ball is visible when the grassbox is empty

Grassbox Full Indicator Ball Fails to Operate

1. Remove grass clippings from both sides of grassbox full indicator.
2. Make sure the discharge chute on the deck and the grassbox are clean and free from debris.
3. If the chute blocks persistently in longer grass - raise the cutting height.
4. If the problem persists.
   Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.

Service Recommendations

- **Your product is uniquely identified by a silver and black product rating label.**
- **We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.**

Guarantee and Guarantee Policy

If any part is found to be defective due to faulty manufacture within the guarantee period, Electrolux Outdoor Products, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

(a) The fault is reported directly to the Authorised Repairer.
(b) Proof of purchase is provided.
(c) The fault is not caused by misuse, neglect or faulty adjustment by the user.
(d) The failure has not occurred through fair wear and tear.
(e) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Electrolux Outdoor Products.
(f) The machine has not been used for hire.
(g) The machine is owned by the original purchaser.
(h) The product has not been used outside of the country in which it was purchased.
(i) The machine has not been used commercially.

* This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

* Replacing worn or damaged blades
* Failures as a result of not reporting an initial fault.
* Failures as a result of sudden impact.
* Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
* Machines used for hire are not covered by this guarantee.
* The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Blades, Electric Mains cable.
* **Caution!**
Electrolux Outdoor Products does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Electrolux Outdoor Products, or by the machine having been modified in any way.

BELGIQUE/BELGIË	**Flymo Belgique/België** **Tel: 02 363 0311, Fax: 02 363 0391**
ČESKÁ REPUBLIKA	**Electrolux, spol. s.r.o., oz Electrolux Outdoor Products,** **Na Křečku 365, Praha 10 - Horní Měcholupy.** **Tel: 02/7847 0164, Info-linka: 0800/110 220** **Internet: www.partner-flymo.cz E-mail: info@husqvarna.cz**
DANMARK	**Electrolux Outdoor Products, Flymo/Partner A/S,** **Lundtoftegaardsvej 93A, DK 2800 Kgs.Lyngby** **Tel: 45 87 75 77, Fax: 45 93 33 08, www.flymo-partner.dk**
DEUTSCHLAND	**Flymo Deutschland** **Tel: 097 21 7640, Fax:097 21 764202**
ESTONIA	**Electrolux Estonia Ltd (Electrolux Eesti AS)** **Tel: (372) 6650010**
FRANCE	**Flymo France SNC** **Tel 01 46 67 8141, Fax 01 43 34 2491**
FINLAND SUOMI	**Electrolux Outdoor Products Finland** **Tel: 00 358 9 39611, Fax: 00 358 9 3961 2644**
ITALIA	**McCulloch Italiana s.r.l. - Via Como 72, 23868 Valmadrera** **(LECCO) - ITALIA** **Tel: 800 017829, Fax: 0341 581671**
IRELAND	**Flymo Ireland** **Tel: 01 4565222, Fax: 01 4568551**
MAGYARORSZÁG	**Electrolux Lehel Kft** **Tel: 00 36 1 251 41 47**
NORGE	**Flymo/Partner, div. av Electrolux Motor a.s.** **Tel: 69 10 47 90**
NEDERLAND	**Flymo Nederland** **Tel: 0172-468322, Fax: 0172-468219**
ÖSTERREICH	**Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ,** **Tel: 0732 770101-0, Fax: 0732 770101-40,** **email: office@husqvarna.co.at Internet: www.husqvarna.at**
POLSKA	**Electrolux Poland Sp. z.o.o. Husqvarna, Wysockiego 15 b** **03-371 Warszawa** **Tel:- (0-22) 330 96 00, Fax: (0-22) 330 96 35**
SLOVENIJA	**Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ,** **Tel: 0732 770101-0, Fax: 0732 770101-40,** **email: office@husqvarna.co.at Internet: www.husqvarna.at**
SLOVENSKA	**Electrolux Slovakia s.r.o., Borova Sihot 211, 033 01 Lipt. Hradok** **Tel: 044 522 14 19, Fax: 044 522 14 18, www.flymo-partner.sk**
SCHWEIZ/SUISSE/SUIZZERA	**Flymo Schweiz/Suisse/Suizzera** **Tel 062 889 93 50 / 889 94 25, Fax 062 889 93 60 / 889 94 35**
SVERIGE	**Electrolux Outdoor Products, Sverige** **Tel: 036 – 14 67 00, Fax: 036 – 14 60 70**
UNITED KINGDOM	**Electrolux Outdoor Products United Kingdom** **Tel: 01325 300303, Fax: 01325 310339**

Electrolux Outdoor Products
Aycliffe Industrial Park
NEWTON AYCLIFFE
Co.Durham DL5 6UP
ENGLAND
Telephone - (00) 44 1325 300303 Fax - (00) 44 1325 310339
UK Telephone - 01325 300303 Fax - 01325 310339

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries.
© Electrolux Outdoor Products Ltd. Registered Office, Electrolux Works, Oakley Road, Luton LU4 9QQ
Registered number 974979 England

The Electrolux Group. *The world's No.1 choice.*

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

5119103-02